


Product-Specific INSTALLATION & TECH SPECS



PROFILE IDENTIFICATION AND DETAILED DRAWING

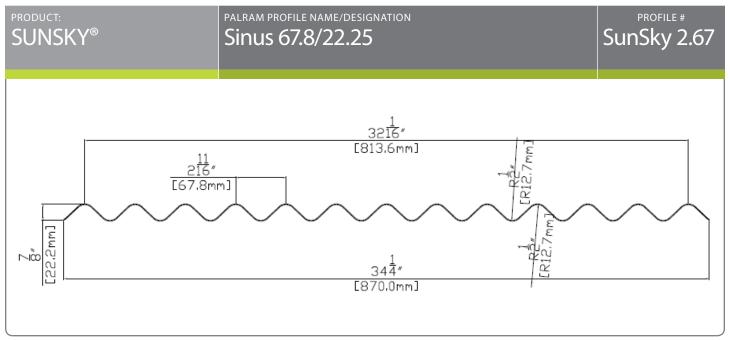

PROFILE DIMENSIONS

PRO	PROFILE THICKNESS LENGTH†		OVERALL WIDTH		NET COVERAGE AFTER OVERLAP		SIDE LAP			
mm	inch	mm	inch	m	feet	mm	inch	mm	inch	%
67.8/22	2.68/0.87	1.2 - 1.5	.03906	1.5-11.8	5-39	870	34.25	813	32.1	6.5

† MAXIMUM RECOMMENDED PANEL LENGTH

m	feet
7	24

While it is technically possible to manufacture and ship the maximum length listed, Palram does not recommend exceeding the length shown at left in order to avoid significant issues related to thermal expansion and contraction.

MAXIMUM ROOF SPAN (INCHES)

Load	.03" (0.8mm) thickness		04" (1.0mm) thickness		.05" (1.2mm) thickness		.06" (1.5mm) thickness	
(lb/ft²)	End Span	Mid Span	End Span	Mid Span	End Span	Mid Span	End Span	Mid Span
15	28	38	32	42	32	42	34	45
25	23	31	27	35	27	35	28	37
40	20	27	23	30	23	31	24	33
60	18	24	20	25	20	27	21	28

NOTES ABOUT MAXIMUM ROOF SPANS

- The specified dimensions do not supersede the requirements of local construction codes.
- The given spans are according to deflections criterion of L/20, and minimum slope of 10%.
- The maximum roof spans are based on calculation model and practical testing.
- The mentioned load refers to wind and snow load only.
- For vertical application spans can be increased by 10%.

Continues on back side

PALRAM PROFILE NAME (a.k.a. Designation)

Sinus 67.8/22.25

PROFILE # SunSky 2.67

FASTENER AND WASHER SPECIFICATION FOR THIS PROFILE

Valley Fixing	Crest Fixing	Side Lap Stitching		
Not applicable for this profile.	Self-drilling 1/4" (6mm) x 2" (51mm) screw with 19 mm diameter- galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.	1/4" (6mm) x 1" (25mm) grommet seals or 1/4" (6mm) x 1" (25mm) self tapping screw with 19mm diameter galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.		

FASTENING

- Apply sealing tape over the SUNSKY panel sidelap corrugation crests, where covered by the next panel.
- Apply sealing tape along the bottom and top end-lap (if there is one), along screw center line or two tapes on both sides of screw center line.
- Pre-drill 3/8" holes where screws are positioned.
- Fasten the screws according to the fastening illustrations below, starting from the first side-lap through, the pre-drilled holes.
- Fasten the Side Lap Stitching Screws or Grommets at every 12-16 inches (Fig. 4 or 5).

- Figure 1: End Purlin fastening schedule.
- Figure 2: intermediate Purlin fastening schedule.
- Figure 3: Side Lap Screw at corrugation crown
- Figure 4: Side Lap Stitch Screw only, in between purlins so that 12-16 inch spacing can be achieved.
- Optional Grommet only, in between purlins so that 12-16 inch spacing can be achieved.






DO NOT OVER-TIGHTEN!


Washers should be perpendicular to purlin, and tightened to the point where they are firmly seated, but not bulging.

FASTENER LOCATIONS FOR THIS PROFILE

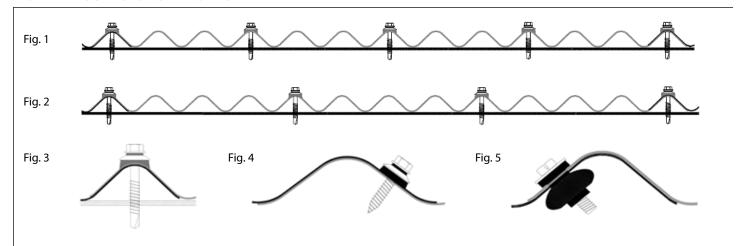

PANEL OVERLAP AND OVERHANG

- Recommended longitude overlap of 8" above purlin.
- Each panel to extend 4" over the fixings line on the purlin.
- Panels should overhang a minimum of 2 inches and maximum 6 inches beyond the row of fasteners.

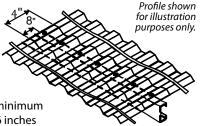

CURVED ROOF APPLICATIONS

Minimum curving radius 16 feet

