


# Product-Specific INSTALLATION & TECH SPECS



#### PROFILE IDENTIFICATION AND DETAILED DRAWING

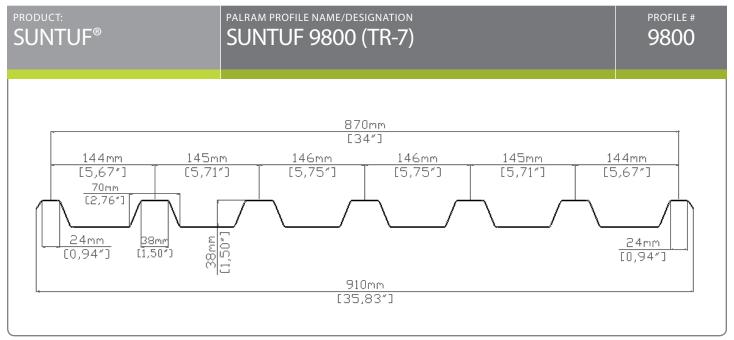

#### PROFILE DIMENSIONS

PROFILE		THICKNESS		LENGTH †		OVERALL WIDTH		NET COVERAGE AFTER OVERLAP		SIDE LAP
mm	inch	mm	inch	m	feet	mm	inch	mm	inch	%
144-145- 146/38	5.6-5.7/1.4	1-1.5	.0305	1.5-11.6	5-38.5	910	35.8	870	34.2	4.4

# † MAXIMUM RECOMMENDED PANEL LENGTH

m	feet
7	24

While it is technically possible to manufacture and ship the maximum length listed, Palram does not recommend exceeding the length shown at left in order to avoid significant issues related to thermal expansion and contraction.

# MAXIMUM ROOF SPAN (INCHES)

Load	.03" (0.8mn	n) thickness	.04" (1.0mn	n) thickness	.05" (1.2mm) thickness		
(lb/ft²)	End Span	Mid Span	End Span	Mid Span	End Span	Mid Span	
10	36	48	37	50	39	52	
12.5	33	44	36	48	37.5	50	
15	30	40	33	44	36	48	
25	27	36	30	40	33	44	
30	24	32	27	36	30	40	
35	21	28	24	32	27	36	
50	18	24	18	24	18	24	

#### NOTES ABOUT MAXIMUM ROOF SPANS

- The specified dimensions do not supersede the requirements of local construction codes.
- The given spans are according to deflections criterion of L/20, and minimum slope of 10%.
- The maximum roof spans are based on calculation model and practical testing.
- The mentioned load refers to wind and snow load only.
- For vertical application spans can be increased by 10%.

Continues on back side

PRODUCT:

**SUNTUF®** 

PALRAM PROFILE NAME (a.k.a. Designation)

SUNTUF 9800 (TR-7)

PROFILE # **9800** 

FASTENER AND WASHER SPECIFICATION FOR THIS PROFILE

/allev Fixing

Crest Fixing

Side Lap Stitchin

Self-drilling ¼" (6mm) x 1.5" (38mm) screw with 19 mm diameter galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.

Self-drilling ¼" (6mm) x 2.5" (63mm) screw with 19 mm diameter galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.

¼" (6mm) x 1.00" (25mm) self-tapping screw with 19mm diameter galvanized / aluminum / stainless metal washer attached to EPDM rubber gasket of 55 to 65 shore hardness.

## FASTENING

- Apply sealing tape over the SUNSKY panel sidelap corrugation crests, where covered by the next panel.
- Apply sealing tape along the bottom and top end-lap (if there is one), along screw center line or two tapes on both sides of screw center line.
- Pre-drill 3/8" holes where screws are positioned.
- Fasten the screws according to the fastening illustrations below, starting from the first side-lap through, the pre-drilled holes.
- Fasten the side lap stitching screws at every 12-16 inches.

- Figure 1: Start fastening the screw on the lower edge purlin (End-lap), on every other corrugation crest.
- Figure 2: Start fastening the screws from the first side lap (left) through the pre-drilled holes.
- Figure 3: Fasten the stitching screws at every 12- 16 inches






## DO NOT OVER-TIGHTEN


Washers should be perpendicular to purlin, and tightened to the point where they are firmly seated, but not bulging.

#### FASTENER LOCATIONS FOR THIS PROFILE

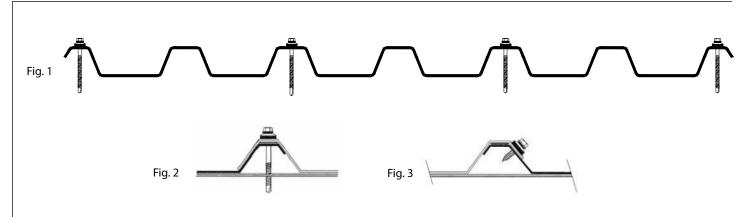

## PANEL OVERLAP AND OVERHANG

- Recommended longitude overlap of 8" above purlin.
- Each panel to extend 4" over the fixings line on the purlin.
- Panels should overhang a minimum of 2 inches and maximum 6 inches beyond the row of fasteners.

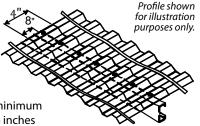

# CURVED ROOF APPLICATIONS

Minimum curving radius 24 feet

